


Studenckie Koło Naukowe CHIP

Konfiguracja RUN w Atollic True Studio



Jak skonfigurować run?

- Run > External Tools > External Tools Configurations...
- Location: D:\Program Files\STMicroelectronics\STM32 ST-LINK Utility\ST-LINK Utility\ST-LINK_CLI.exe
- Working Directory: \${workspace_loc}/\${project_name}/Debug}
- Arguments: -c ID=0 SWD -P \${project_name}.hex -Rst

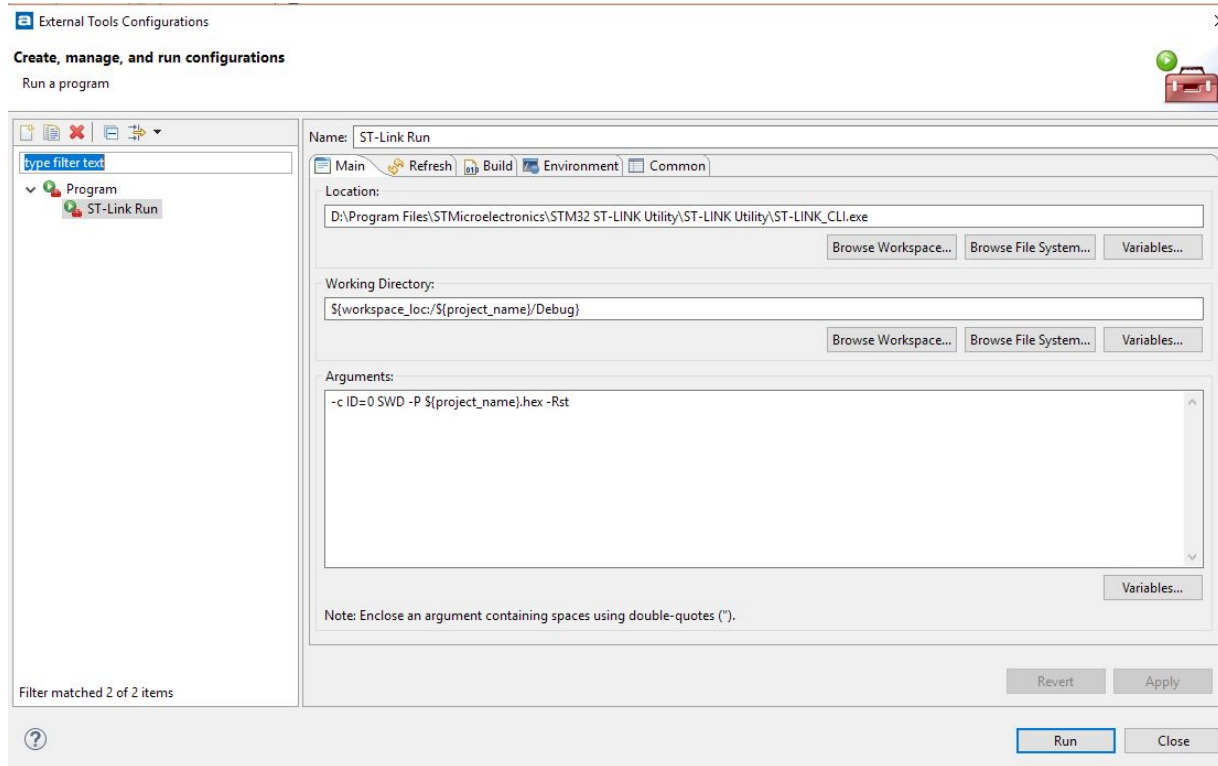

Jak skonfigurować run?

- Run > Run Configurations...
- Launches > Add > Program > (nazwa naszych ustawień)
- Common > Display in favorites menu > (Zaznacz) Run

Dodatkowo:

- Window > Perspective > Customize Perspective... > Launch > (Zaznacz) Run